

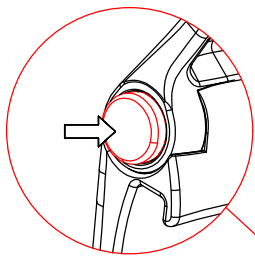


Operating Manual


FERRARA

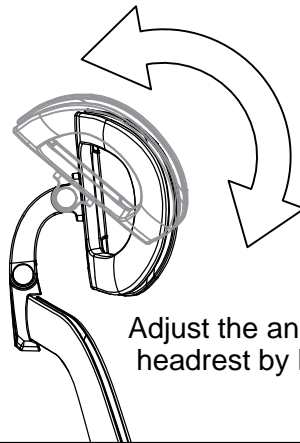


Press the button to adjust the angle of the headrest bracket

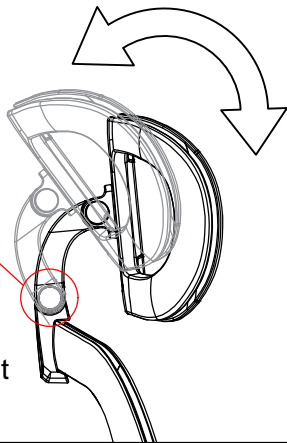


Adjust the angle of the headrest by hand

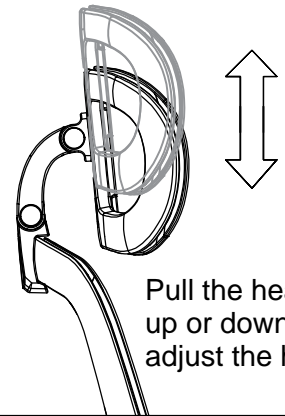


Pull the headrest up or down to adjust the height

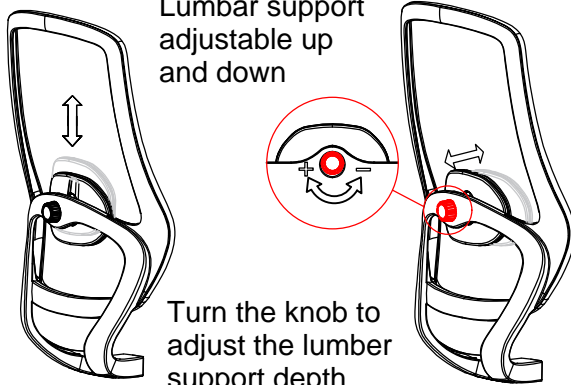



Lumbar support adjustable up and down

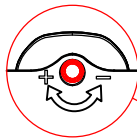


Turn the knob to adjust the lumbar support depth

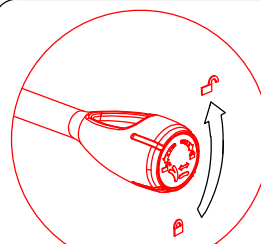


Back tilting adjustment: Turn forward to lock it, and turn backward to unlock it. There are 4 locking positions.

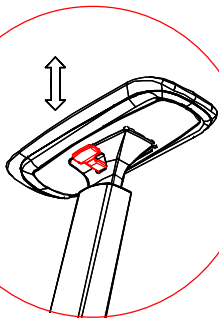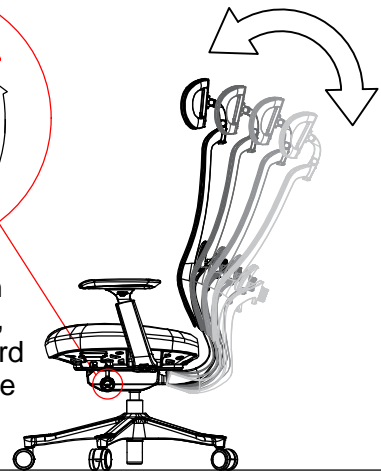



Pull the button upwards to adjust the armrest height

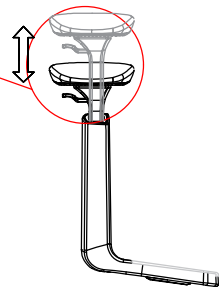


Adjustable armrest pad front and back

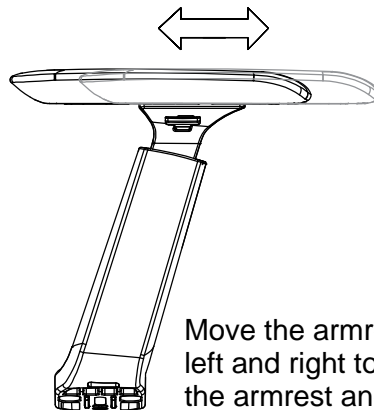

Move the armrest pad left and right to adjust the armrest angle

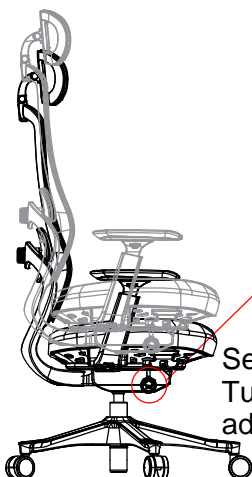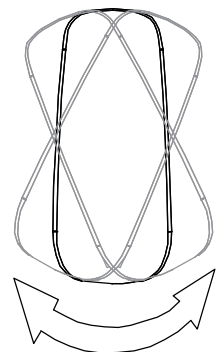

Seat Height Adjustment: Turn the knob forward to adjust the seat height

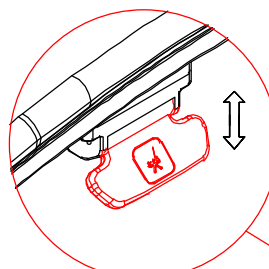

Sliding Seat: Pull the button up and move the seat forward

