


# TORINO NPR 1813 - STOF (User Guide)

|                                      |           |
|--------------------------------------|-----------|
| Date                                 | 09-7-2024 |
| Revision                             | 00        |
| Use Guide for TORINO NPR 1813 - STOF |           |



## Armrest Height Adjustment

Height adjustment procedure  
Pull the lever upwards and find the required position.

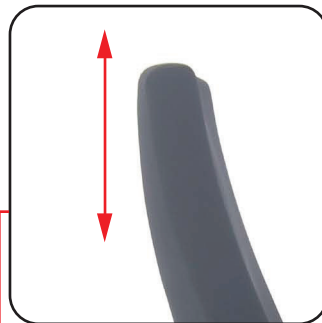

## Back Height Adjustment

Back height adjustment procedure  
Pull up the backrest upward to find the required position.



## Seat Depth Adjustment

Seat depth adjustment procedure  
Pull out the seat cover right lever and glide forwards or backwards.



## Armrest Expand Adjustment

Unlock the lever (rotate anti clockwise) and slide out the armrest aside and lock the lever (rotate clockwise) following required position.




## Armpad Slide Adjustment

Armpad sliding procedure  
Push the armpad button and pull forwards, backwards, in and out to find the required position.



## Armpad Rotate Adjustment

Armpad sliding procedure  
Push the armpad button and push round to find the required position.

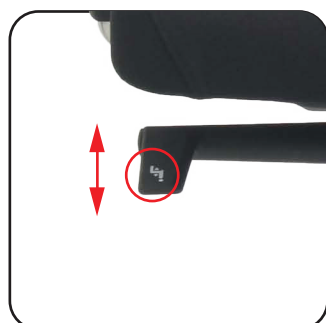

## Chair Height Adjustment

Height adjustment procedure  
Pull the right lever and find the required position



## Back Tilting

Locking procedure  
Find the required position and push the left lever downwards.

Unlocking procedure  
Pull the left lever upwards and give pressure on the backrest.